

The following table shows which solenoids are activated to produce the required torque output from the transmission.

Gear Selector Lever Position	Shift Control Solenoid Valve	Electronic Pressure Regulator Solenoids (EPRS)					
		1	2	3	4	5	6
P					ON	-ON-	
R			ON		ON	-ON-	
N					ON	-ON-	
D 1		ON			ON	-ON-	-ON-
D 2		ON		ON		-ON-	-ON-
D 3		ON	ON			-ON-	-ON-
D 4	ON	ON			ON	-ON-	-ON-
D 5	ON		ON		ON	-ON-	-ON-
D 6	ON			ON	ON	-ON-	-ON-


ON = Active (pressure build up) **OFF** = Inactive **-ON-** = Inactive (pressure drain)

The following table shows which clutches are operating for selected gear ratios to produce the required torque output from the transmission.

Gear Selector Lever Position	Shift Control Solenoid Valve	Clutch				Brake	
		A	B	E	WK	C	D
P							X
R			X				X
N							X
D 1		X			X		X
D 2		X			X	X	
D 3		X	X		X		
D 4	ON	X		X	X		
D 5	ON		X	X	X		
D 6	ON			X	X	X	

X = clutch applied

Shift Elements

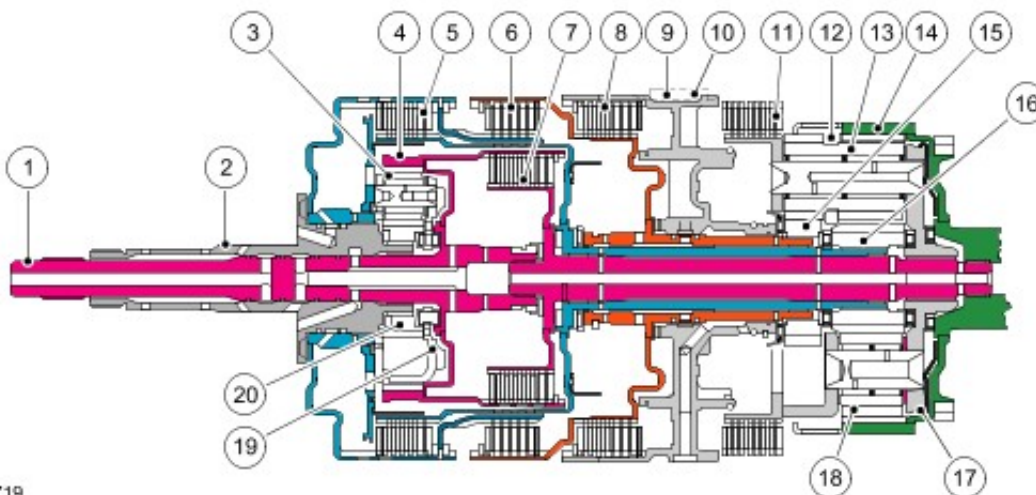

E42719

Item	Part Number	Description
1	-	Turbine shaft