


Published: May 26, 2004

Brake Fluid Reservoir (70.25.31)

Removal


All vehicles

1. Remove the cover.

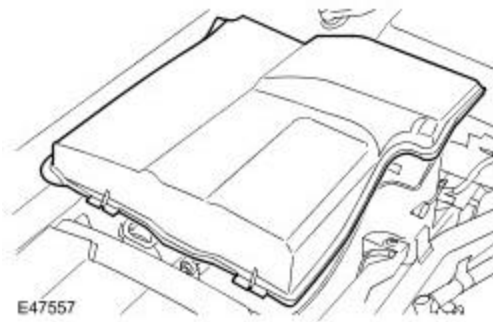


2. Position an absorbent cloth to collect fluid spillage.
3. Disconnect the low brake fluid warning indicator switch electrical connector.

Vehicles with manual transmission

1.  **CAUTION: Always plug any open connections to prevent contamination.**


Disconnect the clutch master cylinder supply line.

All vehicles

1.  **CAUTION: Always plug any open connections to prevent contamination.**

Remove the brake fluid reservoir.

- ▶ Release the 2 clips.
- ▶ Remove and discard 2 brake fluid reservoir seals.

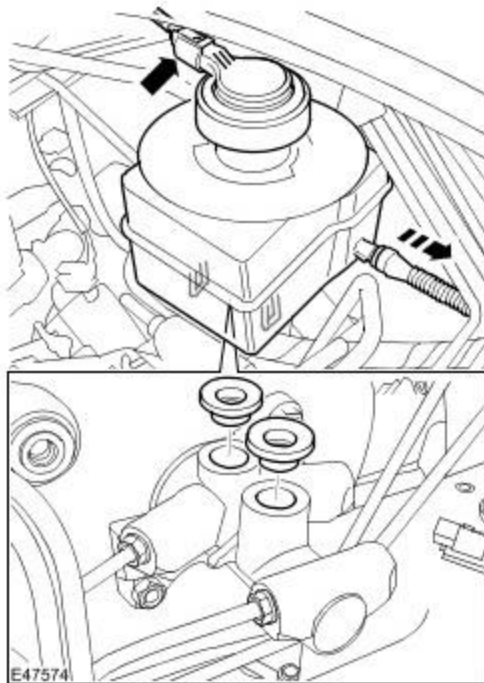

Installation

All vehicles

1. Clean the components.
2. Install the brake fluid reservoir.
 - ▶ Install new brake fluid reservoir seals.

Vehicles with manual transmission

1. Connect the clutch master cylinder supply line.

All vehicles

1. Connect the low brake fluid warning indicator switch electrical connector.
2. Bleed the brake system using T4. For additional information, refer to [Brake System Bleeding \(70.25.02\)](#) (Section 206-00)

Vehicles with manual transmission

1. Bleed the clutch system. For additional information, refer to [Clutch System Bleeding](#) (Section 308-00)