



Removing the air temperature sensor

1. The sensor is behind the front bumper, looking with a mirror, it is clipped to a metal bracket.

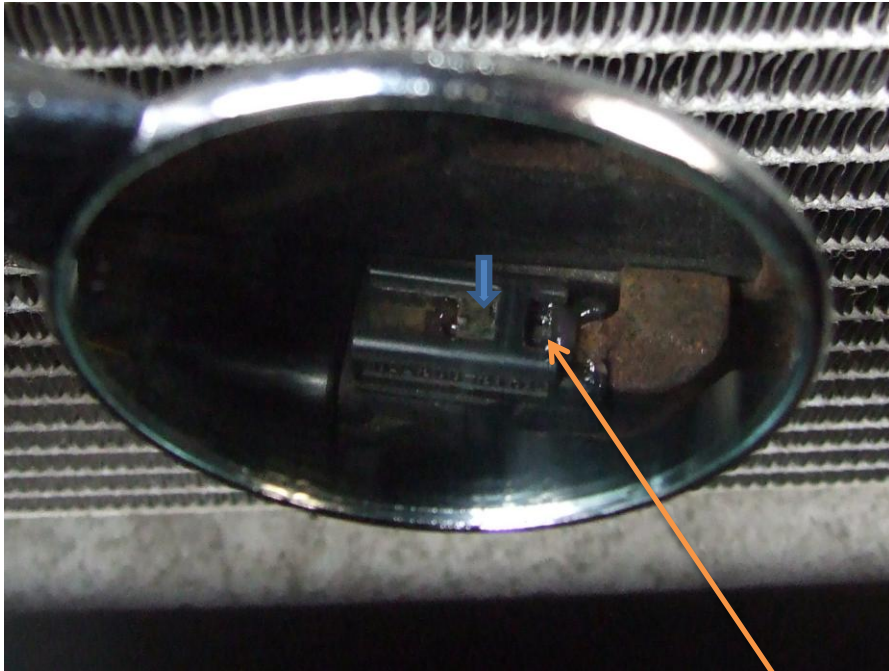


There is a plastic tab that locates into a hole in the bracket, here (slightly obscured due to grease being used when refitting to aid future removal). This needs to be moved upwards by inserting a screwdriver between it and the bracket. There is a piece of plastic at the blue arrow, this snapped off...

2. Slide the sensor to the left (towards the vehicle's offside, if RH drive), and off she comes.

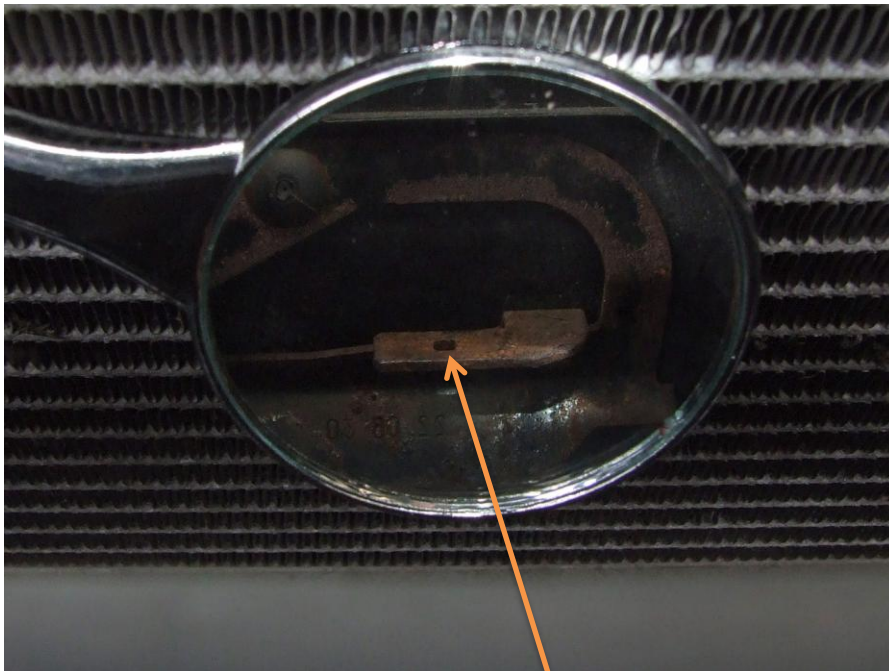

The hole where the tab was can now be seen (no grease; the images were taken in reverse order and the grease added when the sensor was refitted).

3. The sensor, removed and now upside down

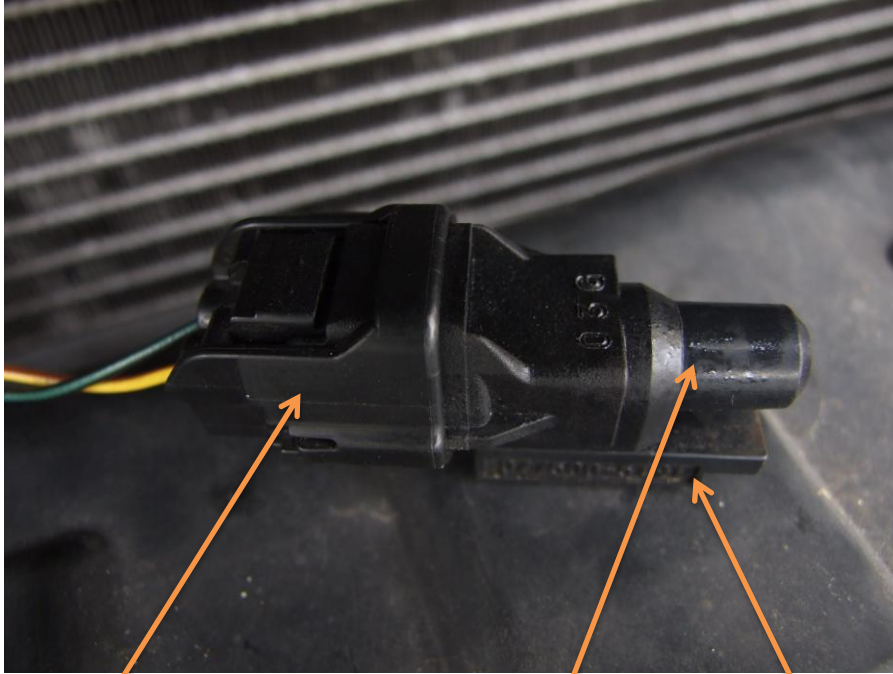


This plug needs to come off

this is the sensor

this is the clip part, now underneath

4. To separate the plug from the sensor

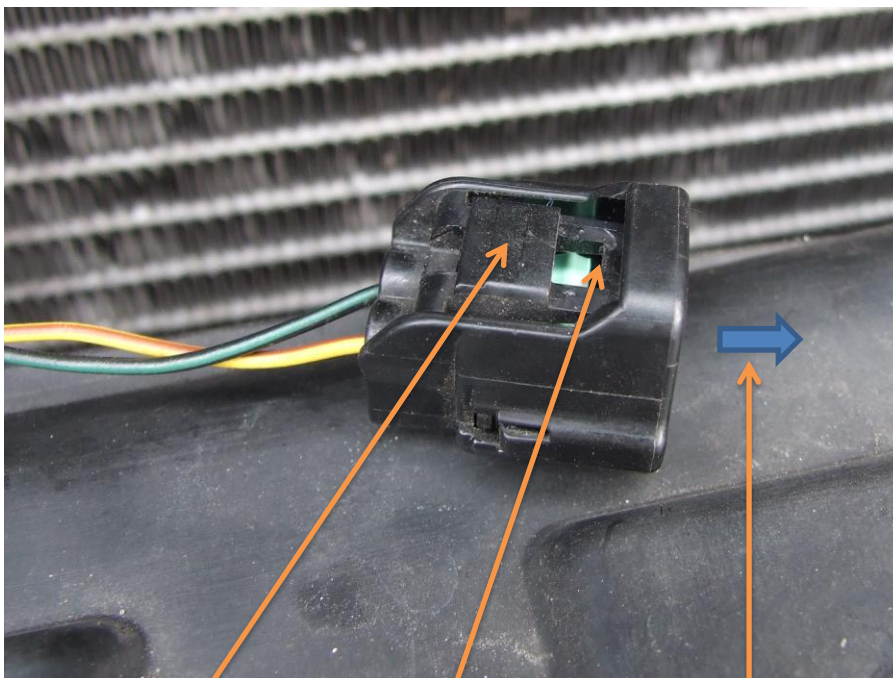

Push down here, this lowers this tab, and pull the sensor out