
Roof Opening Panel Glass (76.84.03)

Removal

- 1 . Open the roof opening panel blind.
- 2. Open the roof opening panel to the tilt position.
- 3 . Remove the roof opening panel glass.

Remove the 3 Torx screws.

Repeat the above procedure for the other side.

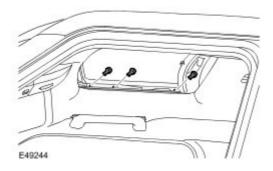

Installation

1 . Install the roof opening panel glass.

Install the Torx bolts, but do not tighten fully at this stage.

2 . Align the roof opening panel glass. For additional information, refer to : Roof Opening Panel, 501-17.