




Rain Sensor (84.12.11)

Removal

1. Remove the interior mirror. For additional information, refer to [Interior Mirror \(76.10.51\)](#) (Section 501-09)
2. Remove the rain sensor.
 - ▶ Release the 2 clips.
 - ▶ Disconnect the electrical connector.

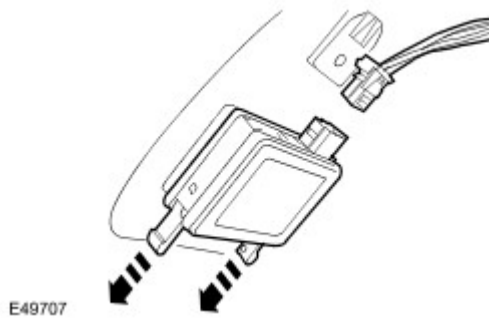

Installation

1. To install, reverse the removal procedure.
 - ▶ Configure a new sensor using T4.