

Here's how to make the alarm system use the horns not the battery back up sounder.


This guide is for a RHD D3 for LHD everything is on the other side of the D3

1. open the bonnet and open the left hand box see pic



2. Locate the alarm sounder, its just behind the ABS module and to the left of the brake servo (It has volvo on it)

3. On the alarm sounder there's a plug with three wires coming from it. You need to disconnect this (see pic), It is fiddly and I used a small flat blade screwdriver to remove it. Then just tuck it away.

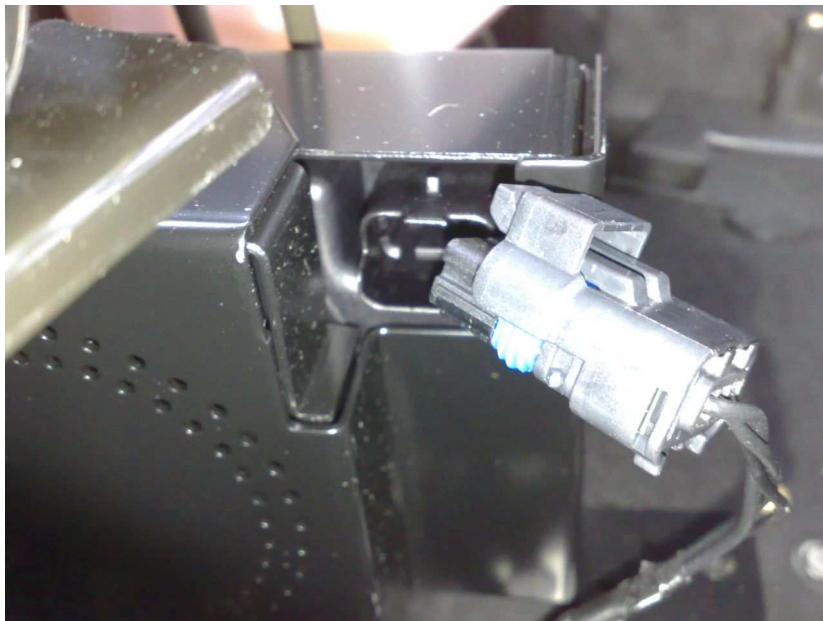

4. Once you have done the above the alarm system defaults to the horns.
To test lock the car give it 30 secs and then open the passengers door manually with the key this will set the alarm off.