


## Floor Console Upper Panel (76.25.11)


### Removal

- 1 . Remove the ride and handling optimization switch assembly.  
For additional information, refer to [Ride and Handling Optimization Switch \(86.65.11\)](#).

- 2 . Remove both cup holder inserts.

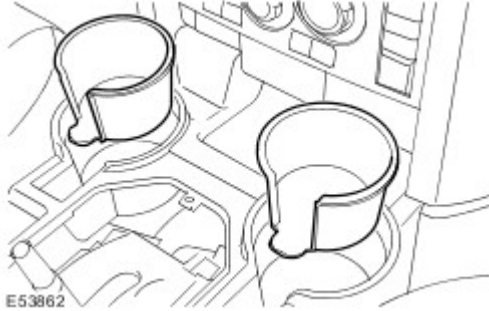

- 3 . Remove the floor console liner.

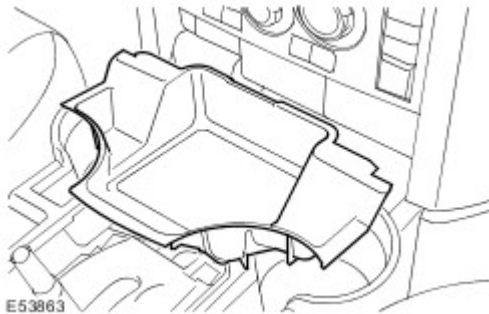


- 4 . Remove the parking brake switch.
  - ▶ Remove the plastic insert.
  - ▶ Remove the screw.
  - ▶ Disconnect the electrical connector.



- 5 . Remove the floor console upper panel.
  - ▶ Open the cubby box lid.
  - ▶ Remove the rubber insert.
  - ▶ Remove the plastic insert.

▶ Remove the screw.

▶ Release the 8 clips.

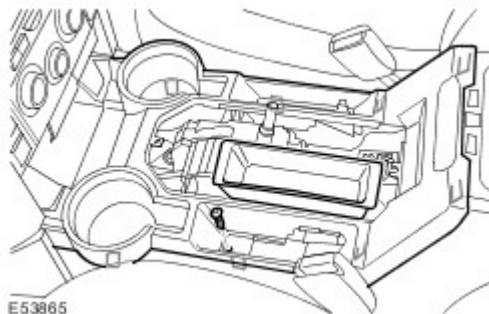

## Installation

1 . Install the floor console upper panel.

▶ Tighten the screw.

▶ Install the rubber insert.

▶ Install the plastic insert.

2 . Install the parking brake switch.

▶ Connect the electrical connector.

▶ Install the screw.

▶ Install the plastic insert.

3 . Install the floor console liner.

4 . Install both cup holder inserts.

5 . Install the ride and handling optimization switch assembly.

For additional information, refer to [Ride and Handling Optimization Switch \(86.65.11\)](#).